



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Stereo](#) > [How to change FM stations on a Classic Stereo?](#)

How to change FM stations on a Classic Stereo?

Customer Support - 2025-09-29 - [Classic Stereo](#)

You would like to save and change your FM Stations on your Classic Stereo?

1. When you switch to FM mode for the first time, press the "**Home**" button to enter the menu.
2. Enter "**Scan setting**" and select "**Yes**" or "**No**" for "**Strong stations only?**".
3. Enter "**Audio setting**" to choose if you want to listen in Mono only, in case you experience **weak FM reception**.
4. Use the "**Skip forward/Skip back**" buttons to manually step through the FM frequencies.
5. Long pressing the Skip buttons will start to seek stations quickly.

1. To access FM stations stored in the presets, short press the "**Preset list**" button on the radio while being in FM mode. This will open the "**Recall from Preset**" list.
2. Use the "**Volume>Select**" dial to move through the list of available stations.
3. Once you've found the station of your choice, press the "**Volume>Select**" dial to switch to that station.

The **first 4 presets** can also be recalled using the preset button on your remote control.