



[FAQs](#) > [Evoke Series - Modern Music Systems](#) > [Evoke Home](#) > [How can I change FM stations on an Evoke Home?](#)

## How can I change FM stations on an Evoke Home?

Customer Support - 2025-01-27 - [Evoke Home](#)

### You would like to save and change your FM Stations on your Evoke Home?

1. When you switch to FM mode for the first time, press the "**Home/select**"- button to enter the menu.
2. Enter "**Scan setting**" and select "**Yes**" or "**No**" for "**Strong stations only?**".
3. Enter Audio setting to choose if you want to listen in Mono only, in case you experience weak FM reception.
4. To manually search for stations, hold the up/down arrow keys, or the Skip fwd/Skip bwd keys pressed for 1 second to start the station seek.
5. To access FM stations stored in the presets, short press the "**Favourite**" button on the radio while being in FM mode.
6. This will open the "**Recall from Preset**" list.
7. Use the up/down arrow keys to move through the list of available stations.
8. Once you've found the station of your choice, press the "**Home/select**"- button to switch to that station.
9. Your fist 6 presets can also be recalled by pressing the direct access preset buttons beneath the Volume encoder.