



[FAQs](#) > [Evoke Series - Modern Music Systems](#) > [Evoke Home II](#) > [How do I adjust the display brightness?](#)

## How do I adjust the display brightness?

Customer Support - 2026-09-04 - [Evoke Home II](#)

### Would you like to adjust the display brightness on your Evoke Home II?

To adjust the display brightness,

1. press the **'Home'** button to access the settings.
2. Use the rotary knob to navigate to **'Display brightness'** and press the knob to select it.
3. Here you'll find two settings: **'Dim brightness?'** and **'Brightness levels'**.
4. With **'Dim brightness?'**, you can specify whether the display should be dimmed or not.
5. If you have activated the dimming function, you can use **'Brightness levels'** to continuously adjust the brightness in the different operating modes.

These are:

**On Level**

**Dim level**

**Standby**

1. Select **'On Level'** to set the brightness when the radio is switched on.
2. **'Dim level'** to set the display brightness when the radio switches to dimmed mode.
3. **'Standby'** defines the display brightness in standby mode.

If you wish, you can also dim the display completely.

And that's it! You can now easily adjust the display brightness of your Evoke Home II to suit your surroundings and preferences.