



[FAQs](#) > [Evoke Series - Modern Music Systems](#) > [Evoke One](#) > [How do I change the playback source on my Evoke One?](#)

How do I change the playback source on my Evoke One?

Customer Support - 2026-10-01 - [Evoke One](#)

Would you like to change the playback source currently active on your Evoke One?

The available sources on the Evoke One are **DAB, FM, Internet Radio, Podcasts, Bluetooth, USB and Aux In.**

To select a source for playback,

1. simply press the 'Source' button on your Evoke One to open the selection menu.
2. You can cycle through the available sources by repeatedly pressing the 'Source' button or turning the 'Volume' dial.
3. To confirm your selection, press the dial.

The remote control also features direct access buttons for the various available sources.