



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Mini](#) > [How to adjust the display brightness on a Classic Mini?](#)

## How to adjust the display brightness on a Classic Mini?

Customer Support - 2025-07-24 - [Classic Mini](#)

### Would you like to adjust the brightness of the display on your Classic Mini?

To customize the display brightness,

1. press the "**Home**" button to access "**System Settings**".
2. Use the "**Volume/Select**" dial to scroll through the settings options until you reach "**Brightness**". Press the dial to enter.

The Classic Mini allows you to select the display brightness individually for both operation modes, **battery**, as well as **mains powered**.

For each you will see three options: "**Timeout**", "**On Level**" and "**Dim Level**".

1. Select the "**Timeout**" to define the duration until the display brightness changes from "**On Level**" to "**Dim Level**".
2. Select "**On Level**" to adjust the brightness when the radio is on, and "**Dim Level**" to adjust the brightness of the display when the radio enters dim mode. This means you can set the display to be brighter when you're actively using it, dimmer (or even off).
3. The "**Dim Level**" will also affect the display when the radio is in standby.

And there you go! You can now easily adjust the display brightness of your Classic Mini radio to match your environment and preferences.