



[FAQs](#) > [Elan Series - DAB+ Radios](#) > [Elan Move](#) > [How to adjust the display brightness on an Elan Move?](#)

## How to adjust the display brightness on an Elan Move?

Customer Support - 2026-03-27 - [Elan Move](#)

### Would you like to adjust the brightness of the display on your Elan Move?

1. To change the display brightness, press the "**Home**" (**Back**) button to reach the "**Settings**" menu.
2. Press the "**Play / Select**" button to enter and confirm the different settings.
3. Choose "**Brightness**" and press "**Play / Select**" to confirm.
4. Select "**Timeout**" and use the "**Skip Forward/Skip Back**" buttons to define the period after which a change of the display brightness will take place and confirm your selection with the "**Play / Select**" button.
5. Select "**Level**" and use the "**Skip Forward/Skip Back**" buttons to set the display brightness. You can select from **High**, **Mid** and **Low**.
6. Confirm your choice with the "**Play/Select**" button.

**High** - The display will remain at its brightest

**Mid/Low** - The display brightness will be reduced after the set timeout

Any button pressed will first return to max brightness before it returns to the previously selected.

And that's it! Now you can easily adjust the display brightness of your Elan Move to suit your environment and preferences.

Your Elan Move also lets you adjust the display contrast, simply by selecting "**Contrast**" from the "**Settings**" menu.