



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Active](#) > [How to change FM stations on a Classic Active?](#)

## How to change FM stations on a Classic Active?

Customer Support - 2026-03-23 - [Classic Active](#)

### You would like to save and change your FM Stations on your Classic Active?

When you switch to FM mode for the first time, the system will search all available FM stations and save them to the presets.

After the search, playback begins with the first station found.

1. To access FM stations stored in the presets, short press the "**Presets**" button on your remote control or "**Favourites**" on the main unit while being in FM mode. This will open the "**Recall**" list.
2. Use the "**Select**" dial or the "**Forward/Backward (>| / <|)**" buttons on the remote to move through the list of available stations.
3. Once you've found the station of your choice, press the "**Select**" dial or the "**Play/Pause (>||)**" button on your remote to switch to the selected station.

The first **6 presets** can also be recalled using the "**Presets**" button on your remote control.

For a new scan simply press the "**Scan**" button on your remote control or keep the "**Station List**" button on the main unit pressed for 2 seconds.

A new scan will delete all stored FM presets.