



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Mini](#) > [How to change FM stations on a Classic Mini?](#)

## How to change FM stations on a Classic Mini?

Customer Support - 2025-07-24 - [Classic Mini](#)

### You would like to save and change your FM Stations on your Classic Mini?

When you switch to FM mode for the first time, your radio will automatically scan all available FM frequencies and store them to the presets (**max. 40**). This process may take a few moments as it captures each station. You don't have to do anything.

1. To change the FM station later, short press the "**Preset List**" button on the radio while being in FM mode. This will open the "**Recall from Preset**" list.
2. Turn the "**Volume/Select**" dial to select a station. Once you've found the station you want, press the dial to switch to that station.

If you're looking for a specific FM station or want to fine-tune your listening experience, press one of the "**Skip**" buttons to manually seek through the FM frequencies.

If you want to scan for all FM stations again, simply press the "**Home**" button again while being in FM mode and select the option "**FM Scan**" in the "**System Settings**". Confirm this by pressing the "**Volume/Select**" dial.

Your radio will now delete all stored FM stations and automatically begin scanning for all available stations.