



[FAQs](#) > [Woodland Series - Outdoor Speakers/Radios](#) > [Woodland Mini](#) > [How to change FM stations on a Woodland Mini?](#)

## How to change FM stations on a Woodland Mini?

Customer Support - 2025-07-31 - [Woodland Mini](#)

### You would like to save and change your FM Stations on your Woodland Mini?

1. To scan FM stations, change to FM mode by pressing the Band select button.
2. In FM mode, keep the "**Band**" select button pressed until the radio begins to scan the frequencies. All stations found will be saved to the presets (**max. 40**).
3. To change the FM station, tap on the "**Preset list**" button to access "**Preset Recall**".
4. Using the "**Skip**" keys, you can now step through the available presets by repeatedly pressing the keys or scroll through the list by holding the keys pressed. This works in both directions.
5. Once you've found the station you wish to listen to press the "**Play/Pause**" key to select the station.

For a new scan simply keep the "**Band**" select button pressed while being in **FM** mode.

Your Woodland Mini will then delete all stored FM stations and automatically begin scanning for all available stations.