



[FAQs](#) > [Woodland Series - Outdoor Speakers/Radios](#) > [Woodland Mini](#) > [How to save and recall presets on a Woodland Mini?](#)

## How to save and recall presets on a Woodland Mini?

Customer Support - 2025-06-23 - [Woodland Mini](#)

### You would like to save a preset or recall a preset on your Woodland Mini?

The Woodland Mini allows you to save up to **40** presets, both, for **DAB+** and **FM**.

1. You can either store a radio station currently listened to, to the **quick access preset button** or add it to the preset list.
2. Pressing the **quick access preset button** until "**Preset 1 stored**" appears, will save the station currently listened to.
3. By short pressing the preset button, you can quickly recall it.


1. To store a station to the preset list, long press the "**Preset list**" button until the "**Preset Store**" list opens.
2. Press one of the "**Skip**" buttons to choose the position within the list (**1-40**) and press the "**Play/Pause**" button to save the station to the select preset. This will be confirmed by "**Preset x Stored**".

Choosing presets 1 will **overwrite** a previously saved **quick preset**.

1. To **scan FM** stations, change to FM mode by pressing the **Band** select button.
2. In FM mode, keep the **Band** select button pressed until the radio begins to scan the frequencies. All stations found will be saved to the presets (**max. 40**).
3. To change the FM station, tap on the "**Preset list**" button to access "**Preset Recall**".
4. Using the "**Skip**" keys, you can now step through the available presets by repeatedly pressing the keys or scroll through the list by holding the keys pressed. This works in both directions.
5. Once you've found the station you wish to listen to press the "**Play/Pause**" key to select the station.

For a new scan simply keep the Band select button pressed while being in FM mode. Your Woodland Mini will then delete all stored FM stations and automatically begin scanning for all available stations.

## Button Location / Function

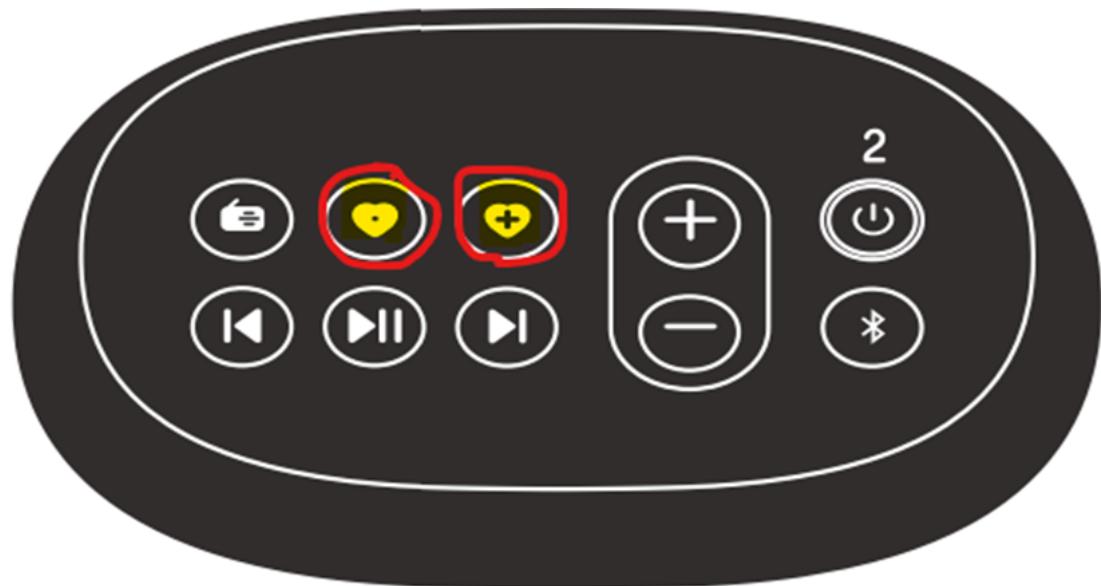

# Controls.

Button	Tap	Hold for 2s
	Standby off / on	Turn off / on
	Tune to DAB or FM	DAB+/FM Station scan
	Recall radio preset 1	Save radio preset 1
	Open preset list to recall	Open preset list to save
	Bluetooth mode	Bluetooth pairing
	Adjust volume	Adjust volume
	DAB+ - Station navigation DAB+/FM - Preset list navigation FM - Station seek Bluetooth - Skip track	DAB+ - Preset list fast navigation FM - Auto seek Bluetooth - Navigate track
	DAB+/FM - Select station DAB+/FM - Recall or save preset DAB+/FM - Mute Bluetooth - Play/Pause	Change display information

To factory reset Woodland Mini hold down  &  together for 5 seconds until Factory Reset appears.