



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic C-D4](#) > [How to save/recall presets on a Classic C-D4?](#)

## How to save/recall presets on a Classic C-D4?

Customer Support - 2025-10-17 - [Classic C-D4](#)

### You would like to save a preset or recall a preset on your Classic C-D4?

The Classic C-D4 allows you to save up to **40** presets for **DAB+** and **FM** radio.

1. To store a station to the preset list, long press the "**Favourites**" button until the "**Save to Preset**" list opens.
2. Turn the "**Select**" dial to choose the position within the list (**1-40**) and press the "**Select**" dial to confirm.
3. The station listened to is now saved on the chosen preset.
4. This can also be done using your remote control. It also offers **6 Quick Access buttons**, allowing you to directly save and recall **presets 1-6**.
5. To recall a preset, short press the "**Favourites**" button (also available on your remote control), select the station you would like to listen to, and confirm by pressing the "**Select**" dial (or "**Select**" button on the remote).