



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Stereo Mini](#) > [How to save/recall presets on a Classic Stereo Mini?](#)

How to save/recall presets on a Classic Stereo Mini?

Customer Support - 2025-10-09 - [Classic Stereo Mini](#)

You would like to save a preset or recall a preset on your Classic Stereo Mini?

The Classic Stereo Mini allows you to save up to **40** presets for **DAB+** and **FM** radio.

1. To store a station to the preset list, long press the "**Presets**" button until the "**Save to Preset**" list opens.
2. Turn the "**Volume/Select**" dial to choose the position within the list (**1-40**) and press the "**Volume/Select**" dial to confirm. The station listened to is now saved on the chosen preset.
3. This can also be done using your remote control. This also offers **6 Quick Access** buttons, allowing you to save and recall presets 1-6.
4. To recall a preset, short press the "**Presets**" button (also available on your remote control), select the station you would like to listen to, and confirm by pressing the "**Volume/Select**" dial (or "**Select**" button on the remote).