



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic C-D4](#) > [How to scan and select DAB stations on a Classic C-D4?](#)

## How to scan and select DAB stations on a Classic C-D4?

Customer Support - 2025-10-14 - [Classic C-D4](#)

### You would like to search for DAB+ radio stations and select them on your Classic C-D4?

When you select DAB+ as a source for the first time, the Classic C-D4 will enter a DAB scan automatically.

All available stations are found and saved in the "**Station list**".

To change the DAB station,

1. Open the "**Station List**" by pressing the Forward or Backward button, turning the "**Select**" dial by one click, or the up or down keys on the remote.
2. Scroll through the station list using the "**Select**" dial or remote.
3. Highlight the station you wish to listen to, and press "**Select**" to tune in.
4. The radio will automatically tune to the highlighted station after 2 seconds, if no button is pressed.

For a new scan simply press the "**Home**" button while being in DAB mode and select the option "**DAB Scan**".

Your radio will then delete all stored DAB stations and automatically begin scanning for all available stations.