



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Stereo Mini](#) > [How to set an alarm on a Classic Stereo Mini?](#)

How to set an alarm on a Classic Stereo Mini?

Customer Support - 2025-10-10 - [Classic Stereo Mini](#)

You would like to set an alarm on your Classic Stereo Mini?

Setting up an alarm on your Classic Stereo radio is very straightforward.

Let's go through the steps together, using an example.

1. To program an alarm, first press the "**Home**" button and turn the "**Volume/Select**" dial to "**System Settings**".
2. Press the "**Volume/Select**" dial to open the "**System Settings**".
3. Scroll to "**Alarms**" and confirm by pressing "**Volume/Select**".
4. Select "**Alarm 1**" and press the "**Volume/Select**" dial to confirm.

This will enter the "**Alarm 1**" settings.

1. Select "**Alarm**". Pressing the "**Volume/Select**" dial will enable or disable the alarm.
2. Enter "**Frequency**" to select the frequency from **Once**, **Weekends** and **Weekdays** and **Daily**.
3. Set the "**Wake Up Time**" by turning the "**Volume/Select**" dial to select the hours, then press the dial to move to the minutes. Turn the dial again to set the minutes and press the dial to confirm your time settings.
4. Select the "**Source**". You can choose between **Buzzer**, **DAB**, **FM**. Turn the dial to select your preferred source and press the dial to confirm.
5. In DAB and FM mode, you can select the station **last listened**, or choose from your **presets**.
6. Choose the "**Duration**" from the available.
7. Now set the "**Volume**" at which you wish the alarm to sound. Again, confirm your setting.

Once you have made all the settings, the alarm will be saved and is ready to wake you up at the set time.

Active alarms will be displayed by corresponding icons. In Standby, also including the set time.

When the alarm goes off:

You can put the alarm in **snooze** mode by pressing any button **except** 'Standby'.

Pressing '**Standby**' turns it off completely.