



[FAQs](#) > [ChargePAK](#) > [General Questions](#) > [ChargePAK](#) > [Radio does not switch when running on batteries/ChargePAK](#)

## **Radio does not switch when running on batteries/ChargePAK**

Laura - 2021-10-19 - [ChargePAK](#)

### **Not switching on when running on ChargePAK**

To avoid the accidental switching on and the unnecessary draining of battery power, the power button on your radio behaves slightly differently when the radio is running on batteries/ChargePAK than it does when running on mains. On batteries/ChargePAK you need to press and hold the power button down for 2 or 3 seconds before it will respond. It's not touch sensitive like it is on mains.