



[FAQs](#) > [Woodland Series - Outdoor Speakers/Radios](#) > [Woodland Mini](#) > [Woodland Mini - Quick Help](#)

Woodland Mini - Quick Help

INSIDE / AQIPA - 2025-07-31 - [Woodland Mini](#)

Our most important tips on how to use your portable Woodland Mini

1. Before operating the product, always consult the [Woodland Mini Quick Start Guide](#). You can find the QSG for the Woodland Mini in our [Download Center](#).

1. **Before we start, we state the obvious.**

Please make sure the antenna is fully extended, and all plastic covers are removed. Using a USB power supply (not included), connect your device to a power source to fully charge the installed battery.

1. **Switching Woodland Mini on/off**

Pressing the Standby on/off button will boot your Woodland Mini.

Would you like to [find out more?](#)

1. [Scanning and selecting DAB+ or FM Stations](#)

We have two separate articles on these topics that you can select by clicking on the highlighted words.

1. **Saving or recalling a preset**

The Woodland Mini offers two methods to save presets. A preset can either be saved to the quick access preset button or added to the preset list.

More details can be found [here](#).

1. **Pairing a Bluetooth device**

Long press the "Bluetooth" button and the Woodland Mini will enter pairing mode. More detailed instructions on how to find your Woodland Mini on the device you want to pair and more on pairing with BT can be found [here](#).