



[FAQs](#) > [Elan Series - DAB+ Radios](#) > [Elan Move](#) > [Elan Move Quick Help](#)

Elan Move Quick Help

Customer Support - 2026-03-27 - [Elan Move](#)

Our most important tips on how to use your Elan Move

1. **Before operating the product**, always consult the [Elan Move Quick Start Guide](#).

You can find the Quick Start Guide for the Elan Move in our [Download Center](#).

1. **Before we start**, we state the obvious.

Make sure you have connected your unit to a proper power source via the USB-C connection to fully charge the battery before first use.

The red LED will light during charging and change to green once charged. Fully extended the antenna.

1. **Switching Elan Move on/off**

Slide the power switch located on the right side of the unit to the **ON** position. Pressing the “**Standby**” button on the front will boot your Elan Move to the last source selected.

When you use Elan Move for the first time, the unit will perform a DAB scan.

1. **Scanning and selecting [DAB+](#) or [FM-Stations](#)**

We have two separate articles on these topics that you can select by clicking on the highlighted links above.

1. **Storing or recalling Favourites**

You can store a station as a preset on your Elan Move to one of the **2 quick preset buttons** or add it to the preset list.

Pressing one of the quick preset buttons until “**Preset xx stored**” appears will save the station currently listened to. Short press the preset button to recall it. More details can be found [here](#).

1. **Changing the source**

This is kept straight forward. Pressing the **"Source"** button on your Elan Move will toggle thru the available.

If you want to know more about the source options, read [this article](#) .

1. **Pairing a Bluetooth device**

Press the **"Source"** button and select BT. The Elan Move will enter pairing mode.

More detailed instructions on how to find your Elan Move on the device you want to pair and more on pairing with BT can be found [here](#).

1. **Adjusting the display brightness**

The display brightness can be dimmed in different level. [Find out more](#).

1. **Selecting the equalizer modes**

The different modes can be reached via the menu **"Settings"**. Find more [details here](#).