



FAQs > Evoke Series - Modern Music Systems > Evoke Home > How can I save/recall presets on an Evoke Home?

How can I save/recall presets on an Evoke Home?

Customer Support - 2025-01-27 - Evoke Home

You would like to save a preset or recall a preset on your Evoke Home?

The Evoke Home allows you to save up to **40** presets for **Internet Radio** or **Podcasts** (shared), and **10** each for **DAB** and **FM** stations.

1. To store a station to the preset list, long press the "**Favourite**" button until the "**Save to Preset**" list opens.
2. Use the up/down arrow keys to choose the position within the list and press the "**Home/select**" button to confirm.
3. The station listened to is now saved on the chosen preset.

1. To recall a preset, short press the preset list button, select the station you would like to listen to, and confirm by pressing the "**Home/select**" button.

Your **first 6** presets can also be recalled by pressing the direct access preset buttons beneath the Volume encoder.

The same is also possible using the remote control.