



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic H4i](#) > [How to change FM stations on a Classic H4i/Classic C-D6i?](#)

## How to change FM stations on a Classic H4i/Classic C-D6i?

Customer Support - 2025-07-29 - [Classic H4i](#)

### You would like to save and change your FM Stations on your Classic H4i/Classic C-D6i?

When you switch to FM mode for the first time, a station scan is performed first. All stations received are now saved in the **'Station list'**.

This process can take a few moments as it records every station. You do not need to do anything.

1. To change the FM station, turn the **'Select'** dial one notch to open the **'Station list'**.
2. Turn the **'Select'** knob again to select a station.
3. When you have found the desired station, press the **'Select'** dial to call up the station.

To perform a new scan for all FM stations

1. Press the **'Home/Back'** button.
2. Select **'FM Setup'** and confirm by pressing the **'Select'** dial.
3. Choose **'FM full scan'** and again confirm your selection.

Your radio will then delete all stored FM stations and automatically start scanning for all available stations.