



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Stereo Mini](#) > [How to change FM stations on a Classic Stereo Mini?](#)

## How to change FM stations on a Classic Stereo Mini?

Customer Support - 2025-10-10 - [Classic Stereo Mini](#)

### You would like to save and change your FM Stations on your Classic Stereo Mini?

When you switch to FM mode for the first time, the system will search all available FM stations and save them to the presets.

After the search, playback begins with the first station found.

1. To access FM stations stored in the presets, short press the "**Presets**" button on the radio while being in FM mode. This will open the "**Recall from Preset**" list.
2. Use the "**Volume/Select**" dial or the "**up/down**" buttons on the remote to move through the list of available stations.
3. Once you've found the station of your choice, press the "**Volume/Select**" dial to switch to that station.

The first **6 presets** can also be recalled using the preset button on your remote control.

For a new scan,

1. press the "**Home**" button to enter "System Settings".
2. Select "**FM Scan**" to start the scan.
  1. Enter "**Scan setting**" to choose "**Strong stations only**" by selecting "**Yes**" or "**No**".
  2. Enter "**Audio setting**" to choose if you want to listen in Mono only, (helpful in case you experience weak FM reception).
3. Use the "**Skip forward/Skip back**" / "**Up/Down**" buttons to manually step through the FM frequencies.
4. Long pressing the Skip buttons will start to seek stations quickly.