



[FAQs](#) > [Woodland Series - Outdoor Speakers/Radios](#) > [Woodland](#) > [How to change FM stations on a Woodland?](#)

## How to change FM stations on a Woodland?

Customer Support - 2025-07-31 - [Woodland](#)

### You would like to scan or change FM Stations on your Woodland?

1. To scan **FM** stations, change to **FM** mode by pressing the band select button.
2. In FM mode, keep one of the "**Skip**" buttons pressed until the radio begins to scan the frequencies.
3. You can now release the button again. It will stop at the next station received. This works in both directions.
4. With pressing the "**Skip forward**" button, the frequency will increase, pressing the "**Skip backward**" button, the frequency will decrease.

To change the FM station, repeat the above until you have found the station you wish to listen to.