



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic C-D4](#) > [How to change the EQ settings on a Classic C-D4?](#)

## How to change the EQ settings on a Classic C-D4?

Customer Support - 2025-10-17 - [Classic C-D4](#)

### You would like to change the EQ audio settings on your Classic C-D4?

1. To reach the EQ settings on the Classic C-D4, press the "**Home/Back**" button on the main unit to enter the "**System settings**".
2. Select "**Equaliser**" and confirm by pressing the "**Select**" dial/button.
3. You can now select from Dynamic, Comfort and Neutral.

You can also reach the EQ settings using the "**EQ**" button **on your remote control**.

Use the "**Up/Down**" to toggle through the different modes.

The available modes are:

**Dynamic** - Deep bass extension - dynamic vocals and instruments

**Comfort** - Easy listening all day

**Neutral** - Sound as close to the source material