



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic C-D6](#) > [How to change the EQ settings on a Classic C-D6?](#)

How to change the EQ settings on a Classic C-D6?

Customer Support - 2025-07-25 - [Classic C-D6](#)

You would like to change the EQ audio settings on your Classic C-D6?

1. To reach the EQ options on the Classic C-D6, press the "**EQ**" button on the **remote control**. The display will change to show the current mode selected.
2. You can toggle through the different modes by repeatedly pressing the "**EQ**" button.

The different modes are:

Dynamic - Deep bass extension - dynamic vocals and instruments

Comfort - Easy listening all day

Neutral - Sound as close to the source material