



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Active](#) > [How to change the source played on my Classic Active?](#)

## How to change the source played on my Classic Active?

Customer Support - 2026-03-23 - [Classic Active](#)

### You would like to change the source that is playing on your Classic Active?

The available sources on the Classic Active are **TV\***, **Bluetooth**, **DAB+**, **FM**, **Aux**, **USB\*\***, and **Optical\*\*\***

1. To choose a source for playback, simply tap on the "**Sources**" button of your Classic Active.
2. Pressing the "**Sources**" button repeatedly or turning the "**Select**" dial will cycle through the available sources.
3. To confirm your selection, press the "**Select**" dial.

The source will also change to the highlighted automatically after 2 seconds, if no other button is pressed.

Your remote control also offers direct access buttons for **TV**, **Bluetooth**, **DAB+**, **FM**, **Aux**, **USB**, and **Optical**.

\***TV** - ARC HDMI - connect to an ARC HDMI port on your TV

\*\***USB** - USB Soundcard Mode only - connect to your PC via USB

\*\*\***Optical In** - Connect the Optical S/PDIF port. Select PCM Stereo format on your source player.