



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Mini](#) > [How to save and recall presets on a Classic Mini?](#)

## How to save and recall presets on a Classic Mini?

Customer Support - 2025-07-24 - [Classic Mini](#)

### You would like to save a preset or recall a preset on your Classic Mini?

The Classic Mini allows you to save up to **40** presets, both, for **DAB** and **FM**.

You can either store a radio station currently listened to, to one of the two **quick preset buttons**, or add it to the **preset list**.

1. Pressing one of the 2 "**Quick Preset**" buttons until "**Preset x stored**" appears, will save the station currently listened to. By short pressing a "**Quick Preset**" button, you can quickly recall it.
2. To store a station to the preset list, long press the "**Preset List**" button until the "**Save to Preset**" list opens.
3. Turn the "**Volume>Select**" dial to choose the position within the list (**1-40**) and press the "**Volume>Select**" dial to confirm.
4. Choosing presets 1 or 2 will overwrite previously saved quick presets.