



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Active](#) > [How to scan and select DAB stations on a Classic Active?](#)

## How to scan and select DAB stations on a Classic Active?

Customer Support - 2026-04-21 - [Classic Active](#)

### You wish to search for DAB+ radio stations and select them on your Classic Active?

When powered on for the first time, the Classic Active will enter a DAB scan automatically.

All available stations are found and saved in the "**Station list**".

To change the DAB station,

1. On your remote control, pressing the "**Stations**" button, the "**Forward (>|)**" or "**Backward (<|)**" button, will enter the "**DAB List**".
2. On your speaker, pressing the "**Stations**" button will enter the "**DAB List**".
3. Scroll through the station list by turning the "**Select**" dial or using the Forward/Backward keys on your remote.
4. Press the "**Select**" dial, or the "**Play/Pause (>||)**" button on the remote to tune in to the displayed station.
5. The unit will automatically tune to the highlighted station after 2 seconds, if no button is pressed.

For a new scan simply press the "**Scan**" button on your remote control or keep the "**Sation List**" button on the main unit pressed for 2 seconds.

A new scan will delete all stored DAB stations, including your saved presets.