



[FAQs](#) > [Woodland Series - Outdoor Speakers/Radios](#) > [Woodland Mini](#) > [How to scan and select DAB stations on a Woodland Mini?](#)

How to scan and select DAB stations on a Woodland Mini?

Customer Support - 2025-07-31 - [Woodland Mini](#)

You would like to search for DAB+ radio stations and select them on your Woodland Mini?

1. When you use Woodland Mini for the first time, the DAB scan happens automatically. All available stations are found and saved in the "**Station list**".
2. To change the DAB station, tap on one of the "**Skip**" buttons to access the "**Station list**".
3. Using the "**Skip**" keys, you can now step through the available stations by repeatedly pressing the keys, or scroll through the list by holding the keys pressed. This works in both directions.
4. Once you've found the station you want, press the "**Play/Pause**" key to select the station.
5. You can also release the "**Skip**" key currently pressed, and the radio will tune to the station displayed.

For a **new scan** simply keep the **Band** select button pressed while being in DAB mode. Your Woodland Mini will then delete all stored DAB stations and automatically begin scanning for all available stations.