

FAQs > Woodland Series - Outdoor Speakers/Radios > How to save and recall presets on a Woodland?

How to save and recall presets on a Woodland? Customer Support - 2024-10-29 - Woodland

You would like to save a preset or recall a preset on your Woodland?

The Woodland allows you to save 3 presets, both, for DAB and FM.

- 1. You can store a radio station currently listened to, to one of the quick access preset buttons.
- 2. Pressing the quick access preset button until "**Saved**" appears, will save the station currently listened to.
- 3. By short pressing the preset button, you can quickly **recall** it.