



지식 베이스 > Evoke Series - Modern Music Systems > Evoke Play > How can I change FM stations on an Evoke Spot/Play?

---

## How can I change FM stations on an Evoke Spot/Play?

Customer Support - 2024-11-14 - Evoke Play

### You would like to save and change your FM Stations on your Evoke Spot/Play?

1. When you switch to FM mode for the first time, press the "**Home/select**" button to enter the menu.
  2. Enter "**Scan setting**" and select "**Yes**" or "**No**" for "**Strong stations only?**".
  3. Enter "**Audio setting**" to choose if you want to listen in Mono only, in case you experience weak FM reception.
  4. To manually search for stations, hold the up/down arrow keys, or the Skip fwd/Skip bwd keys pressed for 1 second to start the station seek.
  5. To access FM stations stored in the presets, short press the "**Favourite**" button on the radio while being in FM mode. This will open the "**Recall from Preset**" list. Your first 4 presets can also be recalled by pressing the direct access preset buttons beneath the Volume encoder.
- 
1. Use the up/down arrow keys to move through the list of available stations. Once you've found the station of your choice, press the "**Home/select**" button to switch to that station.