



Baza Wiedzy > Evoke Series - Modern Music Systems > Evoke Home > How can I change the source played on my Evoke Home?

---

How can I change the source played on my Evoke Home?

Customer Support - 2024-11-19 - Evoke Home

## You would like to change the source that is playing on your Evoke Home?

The available sources on the Evoke Home are **DAB+, FM, Internet Radio, Spotify, Podcasts and Bluetooth Audio, CD and Aux.**

1. To choose a source for playback, simply tap on the **"Source"** button of your Evoke Home to open the selection window.
2. Pressing the **"Source"** button repeatedly or navigating with the arrow keys will cycle through the available sources.
3. To confirm your selection, press the **"Home/select"** button.

The source will also change to the highlighted automatically after 2 seconds, if no other button is pressed.