



Baza Wiedzy > Classic Series - DAB+ and Music Systems > Classic H4 > How can I save or recall presets on a Classic H4?

How can I save or recall presets on a Classic H4?

Customer Support - 2024-11-07 - Classic H4

You would like to save a preset or recall a preset on your Classic H4?

The Classic H4 allows you to save up to **40 presets**, both, for **DAB** and **FM**.

1. You can either store a radio station currently listened to, to one of the four quick preset buttons, or add it to the preset list.
2. Pressing one of the quick preset buttons until "**Preset stored**" appears, will save the station currently listened to. By short pressing the preset button, you can quickly recall it.
3. To store a station to the preset list, long press the preset list button until the "**Save to Preset**" list opens.
4. Turn the "**Select**" dial to choose the position within the list (1-40) and press the "**Select**" dial to confirm.
5. Choosing presets 1-4 will overwrite previously saved quick presets.