



[FAQs](#) > [Evoke Series - Modern Music Systems](#) > [Evoke Spot](#) > [How can I change FM stations on an Evoke Spot/Play?](#)

## How can I change FM stations on an Evoke Spot/Play?

Customer Support - 2025-07-18 - [Evoke Spot](#)

### You would like to save and change your FM Stations on your Evoke Spot/Play?

1. When you switch to FM mode for the first time, press the **"Home/select"** button to enter the menu.
  2. Enter **"Scan setting"** and select **"Yes"** or **"No"** for **"Strong stations only?"**.
  3. Enter **"Audio setting"** to choose if you want to listen in Mono only, in case you experience weak FM reception.
  4. To manually search for stations, hold the up/down arrow keys, or the Skip fwd/Skip bwd keys pressed for 1 second to start the station seek.
  5. To access FM stations stored in the presets, short press the **"Favourite"** button on the radio while being in FM mode. This will open the **"Recall from Preset"** list. Your first 4 presets can also be recalled by pressing the direct access preset buttons beneath the Volume encoder.
- 
1. Use the up/down arrow keys to move through the list of available stations. Once you've found the station of your choice, press the **"Home/select"** button to switch to that station.