



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Stereo](#) > [How to change FM stations on a Classic Stereo?](#)

How to change FM stations on a Classic Stereo?

Customer Support - 2025-09-29 - [Classic Stereo](#)

You would like to save and change your FM Stations on your Classic Stereo?

1. When you switch to FM mode for the first time, press the "**Home**" button to enter the menu.
 2. Enter "**Scan setting**" and select "**Yes**" or "**No**" for "**Strong stations only?**".
 3. Enter "**Audio setting**" to choose if you want to listen in Mono only, in case you experience **weak FM reception**.
 4. Use the "**Skip forward/Skip back**" buttons to manually step through the FM frequencies.
 5. Long pressing the Skip buttons will start to seek stations quickly.
-
1. To access FM stations stored in the presets, short press the "**Preset list**" button on the radio while being in FM mode. This will open the "**Recall from Preset**" list.
 2. Use the "**Volume/Select**" dial to move through the list of available stations.
 3. Once you've found the station of your choice, press the "**Volume/Select**" dial to switch to that station.

The **first 4 presets** can also be recalled using the preset button on your remote control.