



[FAQs](#) > [Evoke Series - Modern Music Systems](#) > [Evoke Home II](#) > [How can I change the EQ settings?](#)

How can I change the EQ settings?

Customer Support - 2026-09-04 - [Evoke Home II](#)

Would you like to change the EQ settings on your Evoke Home II?

To access the EQ settings on the Evoke Home II,

1. press the 'Home' button on the main unit.
2. Turn the control dial and select 'EQ: xxxx'.
3. Confirm by pressing the control dial on the unit or the 'Select' button on the remote control.

You can now choose between Dynamic, Comfort, Neutral and Advanced to personalise your sound.

The 'Advanced' option provides a 10-band equaliser ranging from 32Hz to 16KHz, allowing you to adjust the different frequencies individually.

You can also access the EQ directly via the 'EQ' button on your remote control.

The different modes are:

Dynamic - Deep bass enhancement - dynamic vocals and instruments

Comfort - Comfortable listening all day long

Neutral - Sound as close as possible to the source material

Advanced - Create your own sound experience