



[FAQs](#) > [Evoke Series - Modern Music Systems](#) > [Evoke Home II](#) > [How do I change FM stations?](#)

How do I change FM stations?

Customer Support - 2026-09-04 - [Evoke Home II](#)

Would you like to save and switch between FM stations on your Evoke Home II?

When FM is selected as the source for the first time,

1. your Evoke Home II will start a station scan.
2. Confirm this to save all available stations (frequencies) to the station list.

To change stations,

1. press the List button to open the station list.
2. Use the rotary control to navigate through the list.
3. Once you have found your station, press the rotary control to tune in to it.