



[FAQs](#) > [Evoke Series - Modern Music Systems](#) > [Evoke One](#) > [How do I change FM stations?](#)

How do I change FM stations?

Customer Support - 2026-10-08 - [Evoke One](#)

Would you like to save and switch between FM stations on your Evoke One?

When FM is selected as the source for the first time,

1. your Evoke One will start a station scan.
2. Confirm this to save all available stations (frequencies) to the station list.

To change stations,

1. press the List button to open the station list.
2. Use the rotary control to navigate through the list.
3. Once you have found your station, press the rotary control to tune in to it.