



[FAQs](#) > [Evoke Series - Modern Music Systems](#) > [Evoke Home II](#) > [How do I change the playback source on my Evoke Home II?](#)

How do I change the playback source on my Evoke Home II?

Customer Support - 2026-09-04 - [Evoke Home II](#)

Would you like to change the playback source currently active on your Evoke Home II?

The available sources on the Evoke Home II are **DAB, FM, Internet Radio, Podcasts, Bluetooth, USB, CD** and **Aux In**.

To select a source for playback,

1. simply press the '**Source**' button on your Evoke Home II to open the selection menu.
2. You can cycle through the available sources by repeatedly pressing the 'Source' button or turning the 'Volume' dial.
3. To confirm your selection, press the dial.

The remote control also features direct access buttons for the various available sources.