



[FAQs](#) > [Evoke Series - Modern Music Systems](#) > [Evoke Home II](#) > [How do I save or access favourites?](#)

## How do I save or access favourites?

Customer Support - 2026-09-04 - [Evoke Home II](#)

### Would you like to save or access a favourite on your Evoke Home II?

Your Evoke Home II features a universal favourites system with a total of **150** presets for **DAB, FM** and **internet radio**.

You no longer need to switch between different memory lists.

#### **To save a DAB, FM or internet radio station,**

press and hold one of the favourite buttons 1-3 on the unit or 1-4 on the remote control for 2 seconds until 'saved' is displayed.

#### **To save a station to one of the other memory slots,**

simply press and hold the 4+ button on the unit, or the 'Favourites List' button on the remote control, for 2 seconds until 'Saved' is displayed.

The first 3 (4 on the remote control) memory slots can be accessed directly via the favourites buttons.

#### **To access the other memory slots,**

1. open the favourites list using the 4+ button on the device or on the remote control.
2. Select the desired channel from the list and confirm your choice by pressing the selection dial or the 'Select' button on the remote control.

#### **To remove a station from the list,**

1. first select the station you wish to delete,
2. then press and hold the '4+' button on the unit, or the 'Favourites List' button on the remote control, for 2 seconds.

The memory slot will then be freed up.