



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic C-D6](#) > [How to change the source played on a Classic C-D6?](#)

How to change the source played on a Classic C-D6?

Customer Support - 2025-07-25 - [Classic C-D6](#)

You would like to change the source that is playing on your Classic C-D6?

The available sources on the Classic C-D6 are DAB+, FM, Bluetooth, USB, CD and Aux In.

1. To choose a source for playback, simply tap on the "**Source**" button of your Classic C-D6 to open the selection window.
2. Pressing the "**Source**" button repeatedly or turning the "**Select**" dial will cycle through the available sources.
3. To confirm your selection, press the "**Select**" dial.

The source will also change to the highlighted automatically after 2 seconds, if no other button is pressed.