



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Mini](#) > [How to change the source played on a Classic Mini?](#)

How to change the source played on a Classic Mini?

Customer Support - 2025-07-24 - [Classic Mini](#)

You would like to change the source that is playing on your Classic Mini?

The available sources are **DAB+**, **FM** and **Bluetooth**.

1. To choose a source for playback, simply tap on the "**Source**" button of your Classic Mini to open the selection window.
2. Pressing the "**Source**" button repeatedly, or turning the "**Volume/Select**" dial will cycle through the available sources.
3. To confirm your selection, press the "**Select**" dial.

The source will also change to the highlighted automatically after 2 seconds, if no other button is pressed.