



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic C-D4](#) > [How to pair a Bluetooth device with a Classic C-D4?](#)

## How to pair a Bluetooth device with a Classic C-D4?

Customer Support - 2025-10-15 - [Classic C-D4](#)

### Would you like to pair your phone or another Bluetooth device with your Classic C-D4?

When you switch to Bluetooth mode for the first time by selecting Bluetooth as a source, the Classic C-D4 will automatically enter pairing mode.

All you need to do is go to the Bluetooth settings on your device, find Classic C-D4 in the list, and select it to pair.

The next time you enter Bluetooth mode, Classic C-D4 will automatically try to reconnect to the last connected device.

You're now connected via Bluetooth and ready to enjoy your music wirelessly with Classic C-D4.

To pair a new device or if you need to re-pair/unpair a device, press the "**Pair**" button on the Classic C-D4 until "**Pairing**" is displayed.

If no device is currently paired, Classic C-D4 will automatically enter pairing mode.