



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic C-D6](#) > [How to save and recall presets on a Classic C-D6?](#)

## How to save and recall presets on a Classic C-D6?

Customer Support - 2025-07-25 - [Classic C-D6](#)

### You would like to save a preset or recall a preset on your Classic C-D6?

The Classic C-D6 allows you to save up to **30** presets, both, for **DAB** and **FM**.

1. To store a station to the preset list, long press the "**Preset List**" button until the "**Preset Store**" list opens. Turn the "**Select**" dial to choose the position within the list (1-30) and press the "**Select**" dial to confirm. The station listened to is now saved on the chosen preset.
2. This can also be done using your remote control. The remote control even offers **6 Quick Access** buttons, allowing you to save and recall presets 1-6.
3. To recall a preset, short press the "**Preset List**" button (also available on your remote control), select the station you would like to listen to, and confirm by pressing the "**Select**" button.
4. Your remote control also offers Quick Access buttons to easily recall the first 6 presets stored.