



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic C-D6](#) > [How to scan and select FM radio stations on a Classic C-D6?](#)

## How to scan and select FM radio stations on a Classic C-D6?

Customer Support - 2025-07-25 - [Classic C-D6](#)

### You would like to save and change your FM Stations on your Classic C-D6?

1. When you switch to FM mode for the first time, press the "**Home**" button to enter the menu.
2. Using the "**Select**" dial, choose "**Scan settings**" and select "**All stations**" or "**Strong stations only**".
3. Long pressing the "**Select**" dial will initiate the scan. Your radio will then automatically scan all available FM frequencies and store them to the presets (**max. 30**). This process may take a few moments as it captures each station. You don't have to do anything.
4. To change the FM station later, short press the "**Presets**" button on the radio while being in FM mode. This will open the "**Presets Recall**" list.
5. Turn the "**Select**" dial to select a station. Once you've found the station of your choice, press the dial to switch to that station.

If you're looking for a specific FM station or want to fine-tune your listening experience, turn the "**Select**" dial to manually seek through the FM frequencies.

If you want to scan for all FM stations again, simply keep the "**Select**" button pressed. Your radio will then delete all stored FM stations and automatically begin scanning for all available stations.