



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic C-D4](#) > [Classic C-D4 - Quick Help](#)

Classic C-D4 - Quick Help

Customer Support - 2025-12-16 - [Classic C-D4](#)

Our most important tips on how to use your Classic C-D4

1. **Before operating the product**, always consult the [Classic C-D4 Quick Start Guide](#).

You can find the Quick Start Guide for the Classic C-D4 in our [Download Center](#)

To get a first impression of how to use your new Pure Digital Radio, also [take a look at this video](#).

1. **Before we start**, we state the obvious.

Make sure your unit is connected to the provided power supply, the antenna is fully extended, and all plastic covers are removed.

1. **Switching Classic C-D4 on/off**

Pressing the Standby button will boot your Classic C-D4 to the last source selected.

When you use Classic C-D4 for the first time, the unit will ask you to choose the language, followed by a DAB scan.

1. **Scanning and selecting [DAB+](#) or [FM Stations](#)**

We have two separate articles on these topics that you can select by clicking on the highlighted links above.

1. **Saving or recalling a preset**

The Classic C-D4 offers two methods to save presets. These can either be saved to one of the 6 quick preset buttons on the remote control or added to the preset list.

Pressing one of the quick preset buttons until "**Preset stored**" appears will save the station currently listened to. Short press the preset button to recall it. More details can be found [here](#).

1. **Changing the source**

This is kept straight forward. Pressing the "**Source**" button will open the source window.

If you want to know more about the source options, read this article [here](#).

1. Pairing a Bluetooth device

Press the BT button and the Classic C-D4 will enter pairing mode.

More detailed instructions on how to find your Classic C-D4 on the device you want to pair and more on pairing with BT can be found [here](#).

1. Setting an alarm

The Classic C-D4 has 2 individual alarms you can set.

We have created a detailed [step-by-step help article](#) to explain the details.

1. Adjusting the display brightness in Standby and On mode

Classic C-D4 gives you various customization options to adjust the display brightness.

Each of these functions is described in the respective help article [linked here](#).

1. Selecting the equalizer modes

The different modes can be reached by pressing the EQ button on the remote control.

Find more [details here](#).