

FAQs > Classic Series - DAB+ and Music Systems > Classic C-D6 > Classic C-D6 - Quick Help

Classic C-D6 - Quick Help
INSIDE / AOIPA - 2025-01-22 - Classic C-D6

Our most important tips on how to use your Classic C-D6

- Before operating the product, always consult the <u>Classic C-D6 Quick Start</u> <u>Guide</u>. You can find the QSG for Classic C-D6 in our Download Center here: <u>Classic</u> <u>C-D6 Quick Start Guide</u>
- 1. Before we start, we state the obvious. Please make sure your device is connected to a power source, the antenna is fully extended and all plastic covers are remove

1. Switching Classic C-D6 on/off

Pressing the Standy on/off button will boot your Classic C-D6 to the last source listened. When you use Classic C-D6 for the first time, the unit will automatically enter a DAB scan. All available stations are found and saved to the "Station List" without you having to do anything.

1. Scanning and selecting DAB+ or FM Stations

We have two separate articles on these topics that you can select by clicking on the highlighted words above.

1. Saving or recalling a preset

"The Classic C-D6 offers two methods to save presets. These can either be saved to one of the 6 quick preset buttons on the remote control or added to the preset list.

Pressing one of the quick preset buttons until ""Preset stored"" appears, will save the station currently listened to. Short press the preset button to recall it. More details can be found **here.**

1. Changing the source

This is kept straight forward. Pressing the "Source" button will open the source window. If you want to know more about the source options, read this article **here.**

1. Pairing a Bluetooth device

Press the BT button and the Classic C-D6 will enter pairing mode. More detailed instructions on how to find your Classic C-D6 on the device you want to pair and more on pairing with BT can be found **here.**

1. Setting an alarm

The Classic C-D6 has 2 individual alarms you can set. We have created a detailed step-by-step help article to explain the details **here.**

1. Adjusting the display brightness in Standby and On mode

Classic C-D6 gives you various customization options to adjust the display brightness. Each of these functions is described in the respective help article linked **here**.

1. Selecting the equalizer modes

The different modes can be reached by pressing the EQ button on the remote control. Find more details **here.**