



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic H4i](#) > [How to store and recall station presets on a Classic H4i/Classic C-D6i?](#)

## How to store and recall station presets on a Classic H4i/Classic C-D6i?

Customer Support - 2025-07-29 - [Classic H4i](#)

### You would like to save or recall a preset on your Classic H4i/Classic C-D6i?

The Classic H4i/Classic C-D6i offers you **150** memory locations to store **Internet**, **DAB** and **FM** radio stations in the '**My Favourites**' list.

You can either store a radio station you are currently listening to on one of the **4 quick Favourites buttons (6 on the remote control of the Classic C-D6i)** or add it to the memory list.

1. If you press one of the **quick Favourites buttons (Classic C-D6i on the remote control)** until '**Saved**' appears, the station you are currently listening to will be saved on this button.
2. You can quickly call it up again by briefly pressing the memory button.

To save a station you are currently listening to in the '**My Favourites**' list,

1. press and hold the '**Favourites**' (**Add**) button until '**Saved**' appears in the display.
2. A short press on the '**My Favourites**' button opens the '**My Favourites**' list.
3. You can now select the desired station by scrolling through the list.
4. Pressing the '**Select**' dial will recall the selected station.