



[FAQs](#) > [Elan Series - DAB+ Radios](#) > [How do you correct the time displayed if it is off by 1 hour?](#)

## How do you correct the time displayed if it is off by 1 hour?

Customer Support - 2026-05-12 - [Elan Series - DAB+ Radios](#)

### Is the clock on your Pure radio off by 1 hour?


**This is often related to the Daylight savings settings.**

Twice a year, on the last Sunday in March and the last Sunday in October, the time is shifted by one hour, moving forward in spring and back by one hour in autumn.

Even though you may have set your Pure radio to automatically synchronize the time via DAB, FM or network (Internet Radios only), some models will require your intervention to manually select the Daylight savings settings to ON or OFF.

Open the "System settings" and select "Time/Date"

Enter the "Daylight savings"

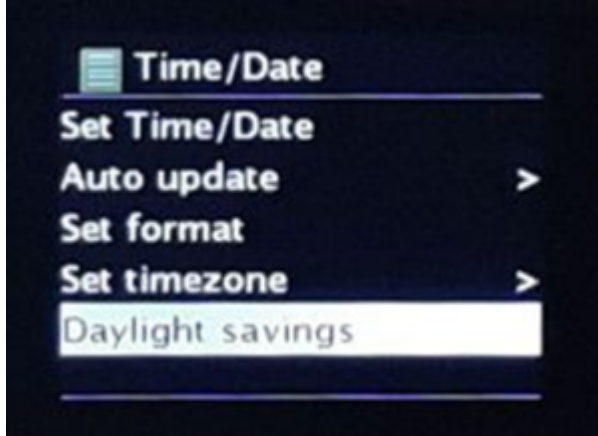

Chose "ON" to activate DST, "OFF" to deactivate.

## Daylight savings

---

### Daylight savings

ON\*

OFF