



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic Active](#) > [How to adjust the display brightness on a Classic Active?](#)

## How to adjust the display brightness on a Classic Active?

Customer Support - 2026-03-24 - [Classic Active](#)

### Would you like to adjust the brightness of the display on your Classic Active?

To change the display brightness, press the “**Dim**” button on your remote control repeatedly to toggle between the available options.

You can choose from “**High**”, “**Dim**” and “**Off**”

**High** - The display will remain at its brightest

**Dim** - The display brightness will be reduced after a few second

**Off** - The display will first dim and be switched off completely.

Any button pressed will first return to max brightness before it returns to the previously selected.

And that's it! Now you can easily adjust the display brightness of your Classic Active to suit your environment and preferences.