



[FAQs](#) > [Classic Series - DAB+ and Music Systems](#) > [Classic C-D4](#) > [How to adjust the display brightness on a Classic C-D4?](#)

How to adjust the display brightness on a Classic C-D4?

Customer Support - 2026-05-22 - [Classic C-D4](#)

Would you like to adjust the brightness of the display on your Classic C-D4?

1. To adjust the display brightness, press the **'Home/Back'** button to access the **'System Settings'**.
2. Scroll through the settings options until you find **'Backlight'** and press the dial to confirm your selection.
3. Three options will be displayed: **'Timeout'**, **'On Level'** and **'Dim Level'**.
4. Select **'Timeout'** to set the duration until the display brightness changes from **'On Level'** to **'Dim Level'**.
5. Select **'On Level'** to set the brightness when the radio is turned on, and **'Dim Level'** to set the brightness of the display when the radio switches to dim mode. This means you can set the display to be brighter when you are actively using it, or darker (or even off**). The **'Dim Level'** also affects the display when the radio is in standby mode.

And that's it! Now you can easily adjust the display brightness of your Classic C-D4 to suit your environment and preferences.

** Not available in standby