



FAQs > Classic Series - DAB+ and Music Systems > Classic C-D6 > How to change the EQ settings on a Classic C-D6?

---

## How to change the EQ settings on a Classic C-D6?

Customer Support - 2024-11-11 - Classic C-D6

# You would like to change the EQ audio settings on your Classic C-D6?

1. To reach the EQ options on the Classic C-D6, press the "**EQ**" button on the **remote control**. The display will change to show the current mode selected.
2. You can toggle through the different modes by repeatedly pressing the "**EQ**" button.

### The different modes are:

**Dynamic** - Deep bass extension - dynamic vocals and instruments

**Comfort** - Easy listening all day

**Neutral** - Sound as close to the source material